

IMPORTANT



INSTALLATION INSTRUCTIONS

FOR **STANDRIDGE GRANITE** SURFACE PLATES

USE SOFTENERS WHEN MOVING YOUR SURFACE PLATE. DO NOT LIFT LOAD ON BOTTOM EDGES. MUST LIFT LEVEL.

DO NOT PLACE SURFACE PLATE UNDER HEATER OR AIR CONDITIONER VENTS AS IT ALTERS THE SURFACE ACCURACY.

IT IS ESSENTIAL THAT YOUR SURFACE PLATE IS SUPPORTED ON 3 POINTS TO MINIMIZE SAG AND WARP. MATCH 3 POINT STAND TO 3 POINTS UNDER THE SURFACE PLATE. SUPPORTING THE PLATE IN ANY MANNER OTHER THAN ON ITS THREE MARKED SUSPENSION POINTS WILL VOID THE CERTIFIED ACCURACY.

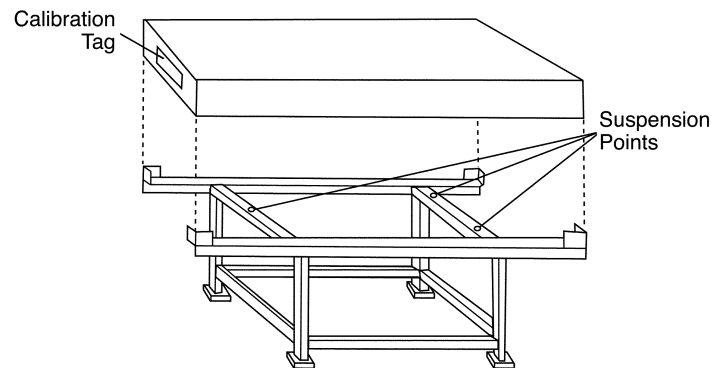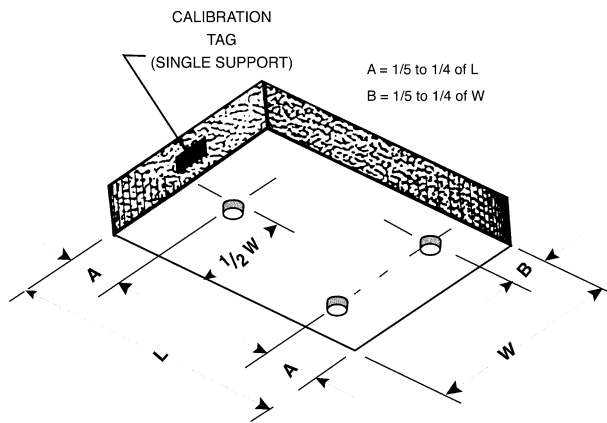

Support layout for rectangular surface plate.

ANY WHITE OR DARK STREAKS IN YOUR GRANITE SURFACE PLATE ARE NOT DEFECTS. THESE COLORATIONS WILL NOT AFFECT YOUR ACCURACY, DURABILITY, OR HARDNESS. IT IS NATURE'S WAY OF MIXING MINERALS.

WE RECOMMEND CLEANING YOUR GRANITE SURFACE PLATE DAILY WITH A PRECISION GRANITE CLEANER FOR SURFACE PLATES OR RUBBING ON A SMALL AMOUNT OF WATERLESS LANOLIN HAND CLEANER USING CLEAN PAPER TOWELS OR DISPOSABLE CLOTHS.

PLATE MUST BE DRY BEFORE USING.

FOR THE ULTIMATE CARE OF YOUR PRECISION GRANITE PRODUCTS, PERIODIC RECALIBRATION IS RECOMMENDED TO DETERMINE IF RESURFACING IS NEEDED TO MAINTAIN FLATNESS ACCURACY.

 **STANDRIDGE**
GRANITE CORP.
"Committed to Excellence"

ISO 9001 Certified
ISO 17025 Accredited

9437 Santa Fe Springs Road • Santa Fe Springs, CA 90670
562/946-6334 • Fax 562/941-3804
www.standridgegranite.com